


AKM 970

PRODUCT SHEET

DE GB FR NL ES PT IT GR SE NO DK FI PL CZ SK RU BG HU RO ؄

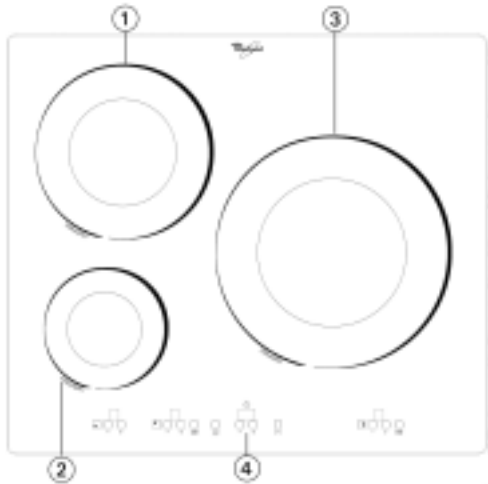

1. Rear left round induction cooking zone
Ø 210 mm
2. Front left round induction cooking zone
Ø 145 mm
3. Right double round induction cooking zone
Ø 180 / Ø 280 mm
4. Display


Important:

To avoid permanently damaging the vitroceramic hob, do not use:

- pots with bottoms that are not perfectly flat.
- metal pots with enamelled bottom.


Any aesthetic defects (scratches, marks, etc.) must be reported at the time of installation.

HOB DIMENSIONS (mm)

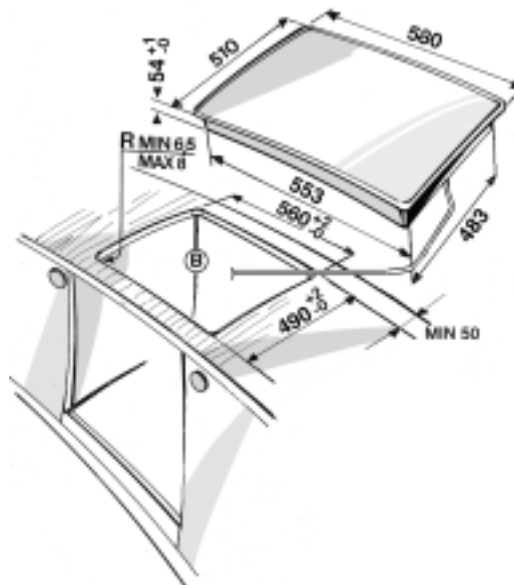

TYPE: PLEAC 230 V~/400 V 3N ~ 50 Hz 7.2 kW
TYPE: PLEAC 230 V~ 50 Hz 7.2 kW (for UK only)

USING THE HOB

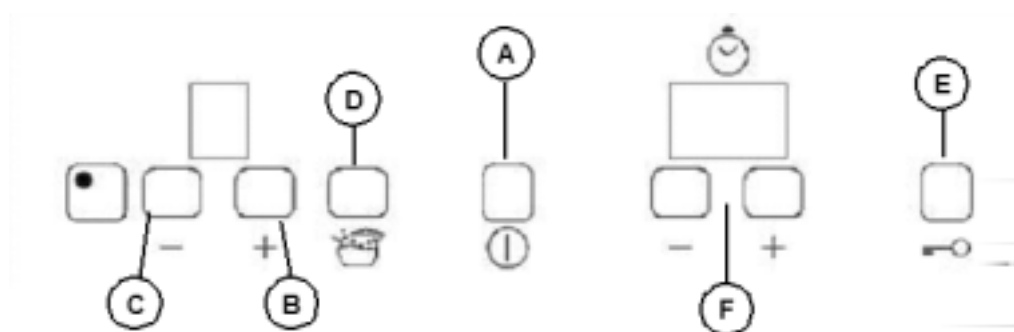

A	On/Off	D	Fast boil
B	Heat setting increase	E	Child safety
C	Heat setting decrease	F	Timer

To switch the hob on, keep button “**A**” pressed for approx. 2 seconds. The 4 cooking zone displays show “0”. If none of the cooking zones is activated within 20 seconds, the hob switches off automatically as a safety precaution.

Press one of the buttons “**B**” corresponding to the cooking zone you intend using.

Select the required heat setting with buttons “**B**” or “**C**”. Heat settings go from 1 to 9.

IMPORTANT: After setting the heat level, the selected cooking zone is deactivated within 10 seconds if no recipient is placed on it.

To change the heat setting of a plate, press buttons “**B**” or “**C**”.

Press buttons “**B**” and “**C**” at the same time to cancel the setting; if the plate is on, it is switched off.

Press button “**A**” to switch off all activated plates.

The **CHILD SAFETY** function is activated by holding down button “**E**” until a dot lights up above the function button. This function locks all the buttons except the hob On/Off button “**A**”. The function remains on even after the hob is switched off and on again and can be deactivated by pressing button “**E**” again until the dot above the function button goes off.

The **TIMER** function (if available) can be used as a clock and also for programming the operation of the required cooking zones. To programme a given cooking zone with the timer function, select and activate the cooking zone with one of the buttons “**B**”. To activate the function, press the button with the clock symbol “**F**”. A dot lights up next to the timer display, indicating the cooking zone selected. Within 20 seconds, set the cooking time using buttons “**F**” +/- (1-99 min). After 20 seconds, the timer function starts automatically and the red indicator dot remains lit.

At the end of the set cooking time, an acoustic signal sounds. If a cooking zone has been set with the timer function, it is deactivated and the red indicator dot goes off.

The timer function can be used to activate all cooking zones at the same time.

To set the “clock” function, set the plate heat level to 0 (zero). Use buttons “**F**” +/- to set the required time. When the set time has elapsed, an acoustic signal sounds.

The **FAST BOIL** function sets a heating level higher than max. to bring water rapidly to the boil.

To activate the function, select a cooking zone with button “**B**” and press button “**D**”. A **P** appears on the display.

RESIDUAL HEAT INDICATOR.

- H** After the cooking zone is switched off, the residual heat indicator “**H**” remains on or flashes, alternating with “0” until the hob temperature falls to an acceptable safety level.

IMPORTANT: The hob's safety features include an automatic switch-off function. Prolonged use of the same heat setting causes switching off of the cooking zone (e.g. after approx. 1 hour at maximum heat setting, the cooking zone switches off).